


# OPERATOR'S MANUAL 36" & 42" SNOWTHROWER




36" SNOWTHROWER  
MFG. NO. 1690547  
42" SNOWTHROWER  
MFG. NO. 1690548  
HITCH  
MFG. NO. 1690557

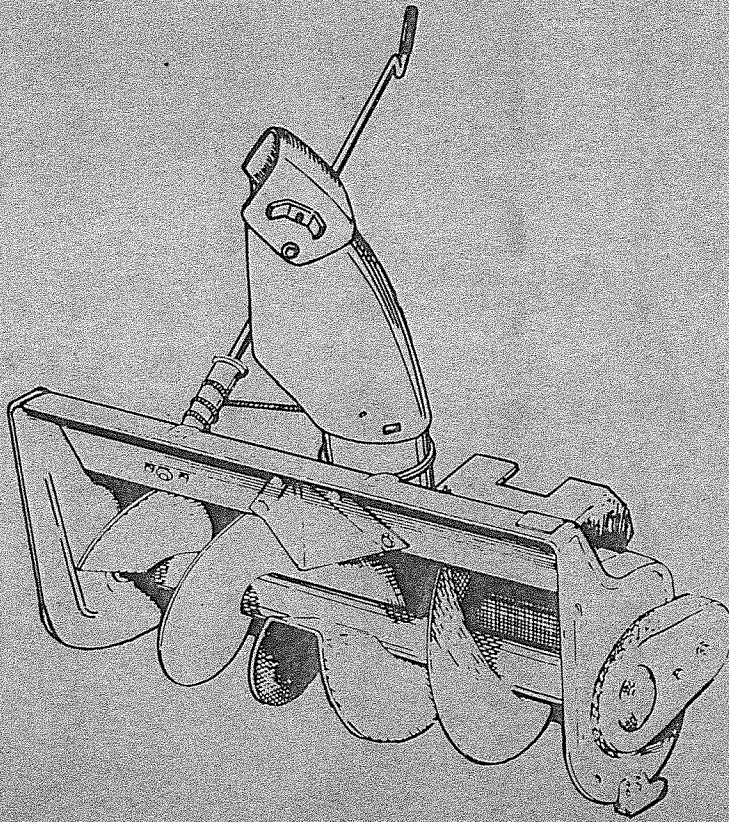

---

## Identification

When ordering replacement parts for your snowthrower, be prepared to give your dealer the identification number found on the identification plate shown below. We suggest you locate the number and record it here for easy reference.

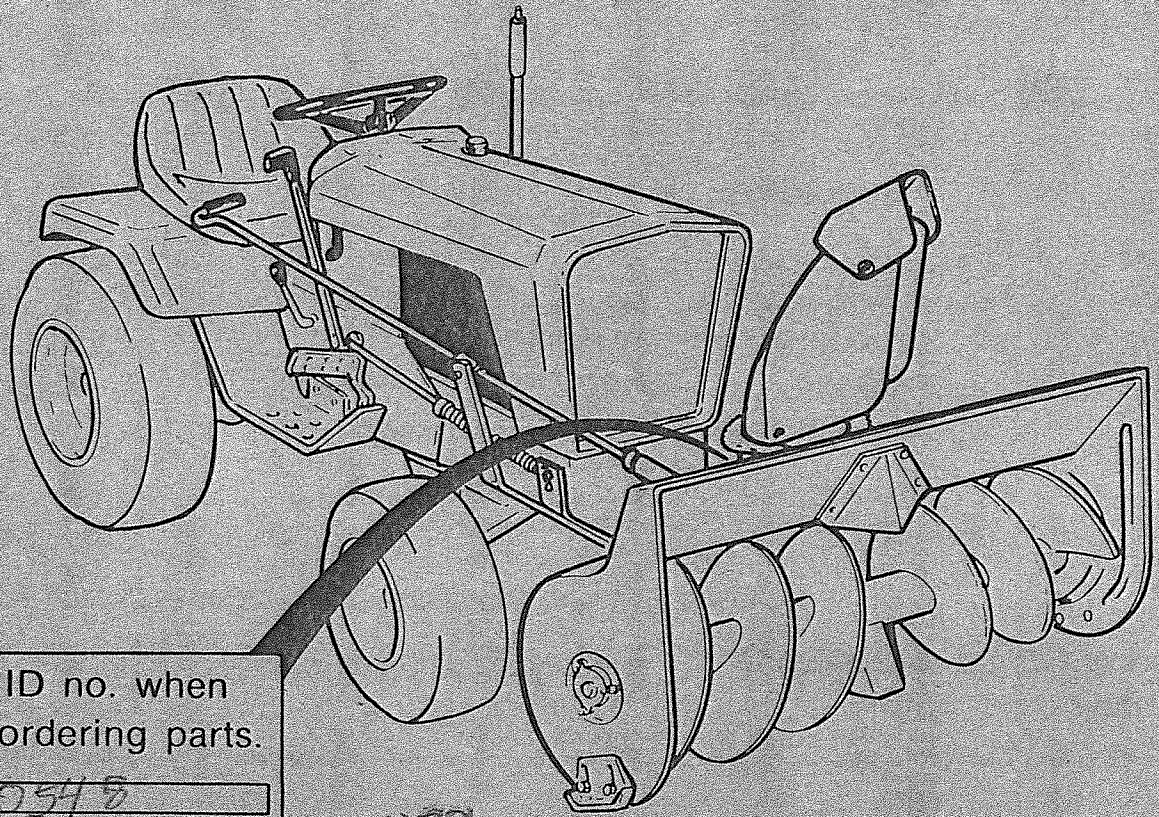

---

## Accessories

See your dealer to purchase any of the following accessories for your tractor or snowthrower.

**REAR WHEEL WEIGHTS** - recommended to improve traction and increase stability. Required on slopes greater than 20% (11.3°).

**CHAINS** - recommended for best performance on slippery surfaces.

**POWER LIFT KIT** - enables the raising and lowering of snowthrower with the flip a switch.

**SNOW CAB** - shelters operator from cold wind and blowing snow.

**ELECTRIC SPOUT ROTATOR** - enables operator to control spout direction with the flip of a switch.

**Models illustrated in this manual may vary slightly from the model you have.**

# Specifications

<u>DIMENSIONS</u>	<u>36" Snowthrower</u>	<u>42" Snowthrower</u>
Effective Width:	36 In. (914 mm)	42 In. (1067 mm)
Overall Width:	37-1/2 In. (953 mm)	43-1/2 In. (1105 mm)
Overall Length:	27 In. (686 mm)	27 In. (686 mm)
Opening Height:	19 In. (483 mm)	19 In. (483 mm)
Auger Diameter:	12 In. (305 mm)	12 In. (305 mm)

## CONTROLS

- Auger Drive:** V-belt and auger chain.
- Raise & lower:** Tractor lift lever or optional electrical lift or hydraulic lift.
- Spout Rotation:** Tee Handle to right of operator or optional electric spout rotator.

## DRIVE TRAIN

- Input Drive:** Cushioning V-belt
- Final Drive:** Enclosed Roller Chain

## CHASSIS

- Auger Bearings:** Self-aligning roller contact with lube fitting
- Housing:** Welded steel channel and stamping.
- Scraper Bar:** Full width high carbon steel - Replaceable

**SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE**


# Table of Contents

<b>IDENTIFICATION</b> .....	<b>Inside Front Cover</b>
<b>ACCESSORIES</b> .....	<b>Inside Front Cover</b>
<b>SPECIFICATIONS</b> .....	<b>1</b>
<b>SAFETY RULES</b> .....	<b>2</b>
<b>INSTALLATION</b> .....	<b>4</b>
<b>INSTALLATION</b> .....	<b>4</b>
<b>SNOWTHROWER REMOVAL</b> .....	<b>5</b>
<b>OPERATION</b> .....	<b>7</b>
<b>NORMAL CARE</b> .....	<b>9</b>
<b>SCHEDULED CARE</b> .....	<b>9</b>
<b>NORMAL STORAGE</b> .....	<b>9</b>
<b>OFF-SEASON STORAGE</b> .....	<b>9</b>
<b>TROUBLESHOOTING</b> .....	<b>11</b>
<b>ADJUSTMENTS</b> .....	<b>12</b>
<b>SKID SHOE</b> .....	<b>12</b>
<b>DRIVE BELT TENSION</b> .....	<b>12</b>
<b>LIFT ROD ADJUSTMENT</b> .....	<b>13</b>
<b>ASSEMBLY</b> .....	<b>14</b>
<b>WINTERIZING THE TRACTOR</b> .....	<b>17</b>
<b>STANDARD FASTENER IDENTIFICATION CHART</b> .....	<b>Inside Back Cover</b>

---

# Safety Rules



Read these safety rules and follow them closely. Failure to obey these rules could result in loss of control of vehicle, severe personal injury to yourself or bystanders, or damage to property or equipment. The triangle  in the text signifies important cautions or warnings which must be followed.



ALL WARNING, CAUTION, and instructional messages on this attachment and on your tractor should be carefully read and obeyed. Personal bodily injury can result when these instructions are not followed.

## GENERAL

- Read the Operating and Service instructions carefully. Be thoroughly familiar with the controls and the proper use of the equipment.
- Never allow children to operate the machine. Do not allow adults to operate it without proper instruction.
- Do not carry passengers.
- Use only attachments or accessories designed for your machine. See your dealer for a complete list of recommended attachments or accessories.
- Keep the area of operation clear of all persons, particularly small children and pets.
- When using any attachments, never direct discharge of material toward bystanders or allow anyone near the vehicle while in operation.
- Make sure:
  - a. tractor and attachments are in good operating condition,
  - b. all safety devices and shields are in good working condition, and
  - c. all adjustments have been made.

## PREPARATION

- Never attempt to make any adjustments while engine is running.
- Thoroughly inspect the area where the snowthrower is to be used and remove all door mats, sleds, boards, wires and other foreign objects.

- Disengage all clutches and shift into neutral before starting engine.
- Do not operate snowthrower without wearing adequate winter outer garments. Wear footwear which will improve footing on slippery surfaces.
- Handle gasoline with care — it is highly flammable.
  - a. Use approved gasoline container.
  - b. Never remove the cap of the fuel tank or add gasoline to a running or hot engine, or fill the fuel tank indoors. Wipe up spilled gasoline.
- Adjust skid shoe height to clear gravel or crushed rock surfaces.
- Do not run the engine indoors. Exhaust fumes are deadly.

## OPERATION

- Disengage power to attachment(s) and stop the engine before leaving the operator's position.
- Always clear snow up and down the face of slopes, and never across the face. Exercise extreme caution when changing direction on slopes. Do not attempt to clear steep slopes.
- After striking a foreign object, disengage PTO, stop the engine, and remove ignition key. Thoroughly inspect the snowthrower for any damage before restarting and operating the snowthrower.
- Exercise extreme caution when operating on or crossing gravel drives, walks or roads. Stay alert for hidden hazards or traffic.
- If the unit should start to vibrate abnormally, disengage PTO, stop the engine, and remove ignition key, and check immediately for the cause. Vibration is generally a warning of trouble.

- Disengage PTO, stop engine, and remove ignition key whenever you leave the operating position, before unclogging the snowthrower housing or chute, and before making any repairs, adjustments, or inspections.
- Take all possible precautions when leaving the vehicle unattended. Disengage the power take-off, lower the attachment, shift into neutral, set the parking brake, stop the engine and remove the key.
- When cleaning, repairing or inspecting make certain snowthrower and all moving parts have stopped. Remove ignition key to prevent accidental starting.
- Be especially careful not to touch tractor or attachment parts which might be hot from operation. Allow such parts to cool before attempting to maintain, adjust or service.
- Never operate snowthrower near glass enclosures, automobiles, window wells, drop-offs, etc., without proper adjustment of snow discharge angle.
- Do not overload machine capacity by attempting to clear snow at too fast a rate.
- Never operate machine at high transport speeds on slippery surfaces. Use care when backing.
- Disengage power to snowthrower when transporting or not in use.

- Never operate the snowthrower without good visibility or light. Always be sure your feet are properly placed on the foot rests and keep a firm hold on the steering wheel.

#### MAINTENANCE & STORAGE

- Keep all nuts, bolts and screws tight to be sure the equipment is in safe working condition.
- Never store the equipment with gasoline in the tank inside a building where fumes may reach an open flame or spark. Allow the engine to cool before storing in any enclosure.
- Do not change the engine governor settings or overspeed the engine.
- To reduce the fire hazard, keep the engine free of grass, leaves or excessive grease.



#### WARNING

If the auger stalls or the chute plugs, Disengage the PTO, stop the engine and remove the key. Set the parking brake. **WAIT FOR MOVING PARTS TO STOP.** Remove the foreign object or clear the spout before restarting the engine.

**STAY AWAY FROM ROTOR AND DRIVE  
WHEN ENGINE IS RUNNING**

LOCATION: ON SNOW THROWER AUGER HOUSING

# Installation & Removal

## INSTALLATION

1. The snowthrower hitch must be installed on front axle as shown in figure 1. To do this, first insert the hitch arms in tractor hitch as shown in figure 2. To align the holes, push the snowthrower hitch onto the front axle so it hooks firmly on top of axle as shown in figure 1. Insert the two pins (C, figure 2) to secure the hitch and install the two spring clips (D).

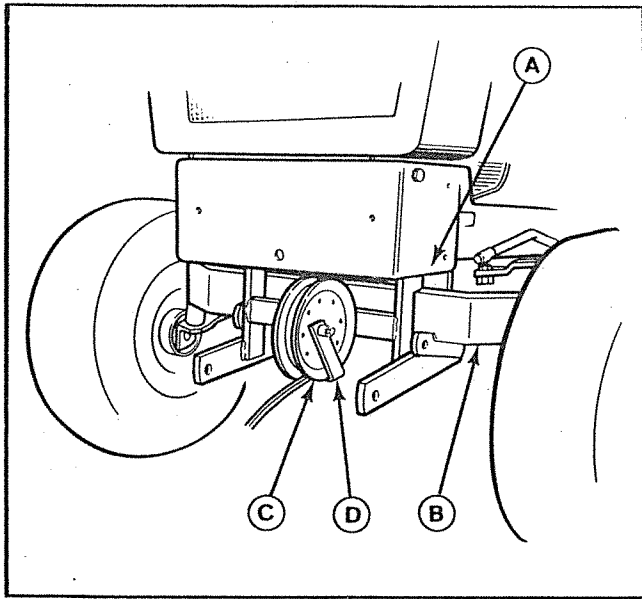


Figure 1. Installing Hitch

- |                                 |                      |
|---------------------------------|----------------------|
| A. Hitch hooked on top of axle. | C. Flat Idler Pulley |
| B. Front Axle                   | D. Belt Stop         |

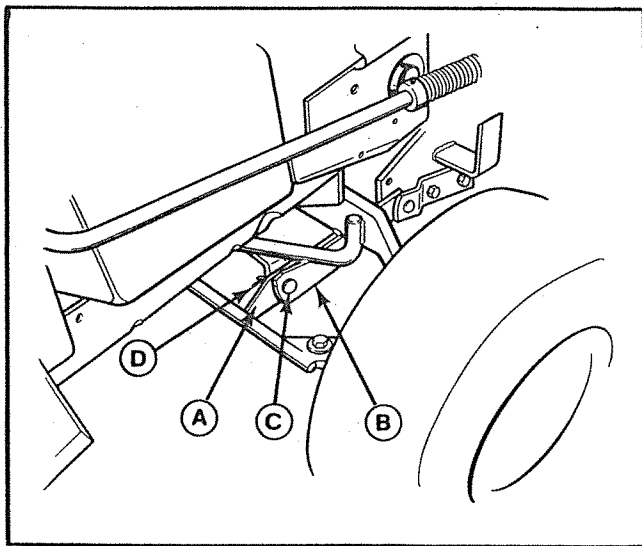


Figure 2. Installing Hitch

- |                                       |                |
|---------------------------------------|----------------|
| A. Snowthrower Hitch Arm (right side) | C. Pin         |
| B. Tractor Hitch                      | D. Spring Clip |

2. Position the snowthrower in front of the tractor.
3. Lift up the snowthrower and align with hitch (C) as shown in figure 3. On each side, insert a pin (A) thru the clip (B), hitch, and snowthrower. Install spring clips in the two pins.

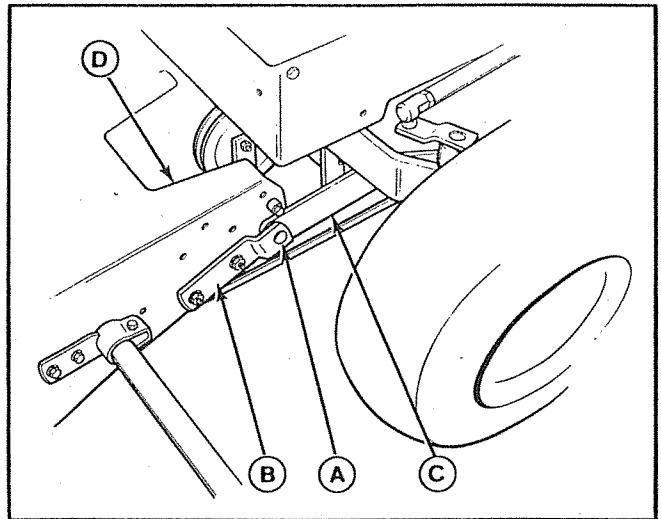


Figure 3. Attach Snowthrower to Hitch

- |         |                |
|---------|----------------|
| A. Pin  | C. Hitch       |
| B. Clip | D. Snowthrower |

4. Go around to the left side of the tractor. Remove the front idler pulley (D, figure 4) by removing the capscrew and attaching hardware. Store the cap-screw; it will not be used with snowthrower.

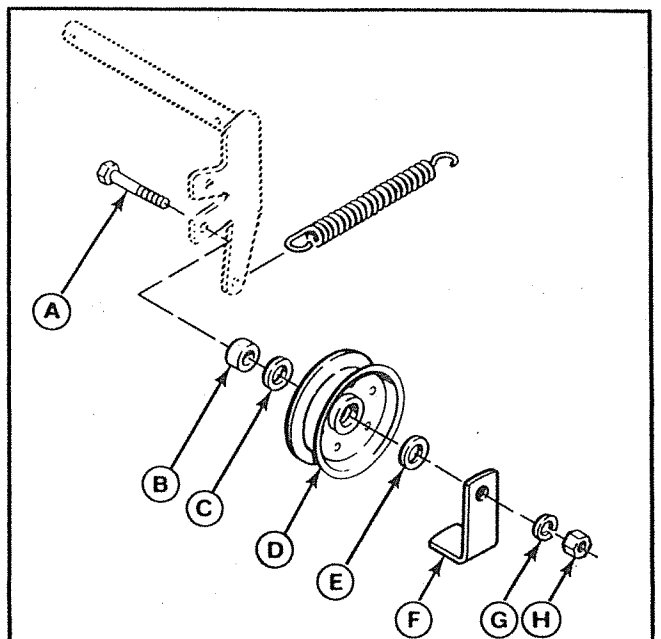



Figure 4. Idler Pulley & Belt Stop (on tractor)

- |                          |               |
|--------------------------|---------------|
| A. Capscrew, 3/8 x 2-1/4 | E. Washer     |
| B. Spacer                | F. Belt Stop  |
| C. Washer                | G. Lockwasher |
| D. Idler Pulley          | H. Nut        |

5. Reinstall the pulley in lower tab as shown in figure 4 using the 2-1/4 inch long capscrew (A) and the belt stop (F) supplied with the hitch. Slip the belt between pulley and belt stop before tightening (flat side of belt goes against pulley).
6. Push the belt tensioning lever down and forward. Install the belt on the pulleys as shown in figure 5. Be sure to install belt in inner groove of PTO pulley. There must be no twists in the belt.
7. Pull the belt tensioning lever back and up. Make sure there is clearance between the belt stops (D, E & H, figure 5) and the belt.

**REMOVAL**


1. Remove the spring clip (B, figure 6) and pull the lift rod (C) out from tractor lift arm (A). Store the spring clip in the lift rod hole.
2. Push the belt tensioning lever down.
3. Remove the belt from the PTO pulley (A, figure 5) and from the two idler pulleys (B & G). If a mower attachment is to be used on the tractor, remove the front idler pulley (D, figure 4) and install it in upper tab.

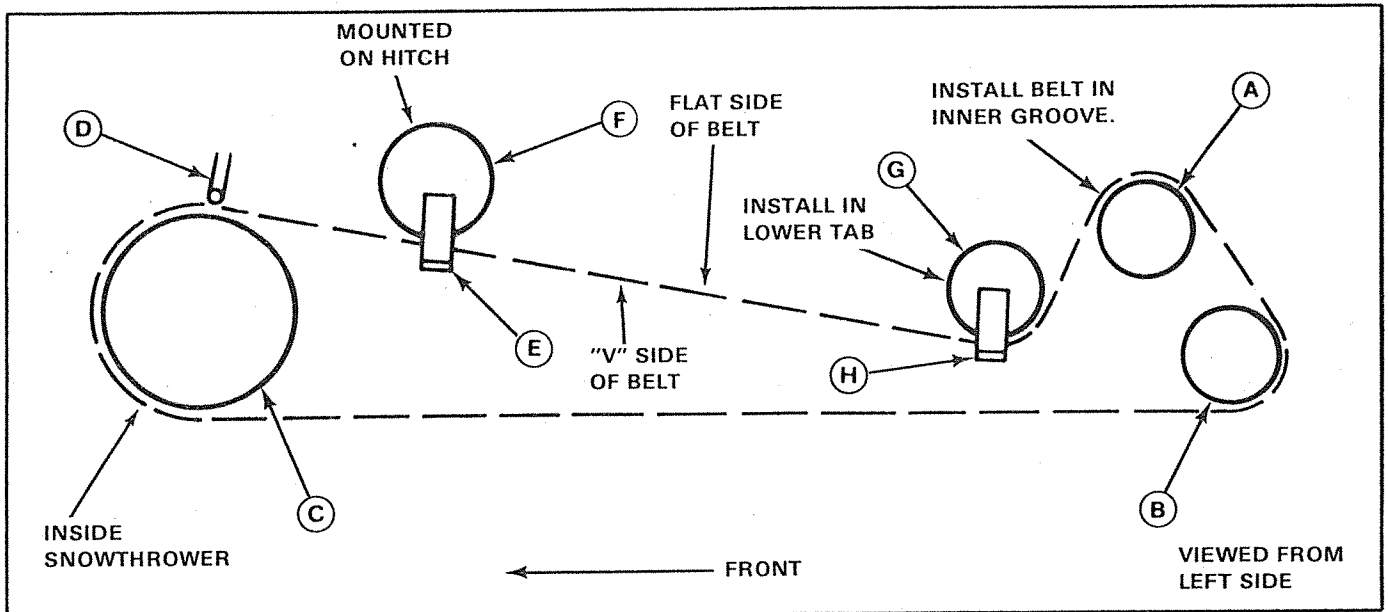

**Figure 5. Belt Diagram**

- |                       |                       |
|-----------------------|-----------------------|
| A. PTO Pulley         | E. Belt Stop          |
| B. Rear Idler Pulley  | F. Idler Pulley       |
| C. Snowthrower Pulley | G. Front Idler Pulley |
| D. Belt Stop          | H. Belt Stop          |

8. Insert end of lift rod thru hole in tractor lift arm (A, figure 6). Install the spring clip (B) thru hole in lift rod (C).
9. If installing for the first time, perform initial adjustment as follows.
  - a. Fully lower the lift lever. Place the front set collar one inch from the rod guide as shown in figure 7, and tighten the setscrew.
  - b. Place rear set collar against the spring, compress the spring slightly, and tighten the set-screw. (The more the spring is compressed, the more down pressure there will be.)
10. Increase front tire pressure to 20 psi (138 kPa) to compensate for the added weight. Be sure tires have equal pressure.
11. Proceed to Adjustments section and check all adjustments.

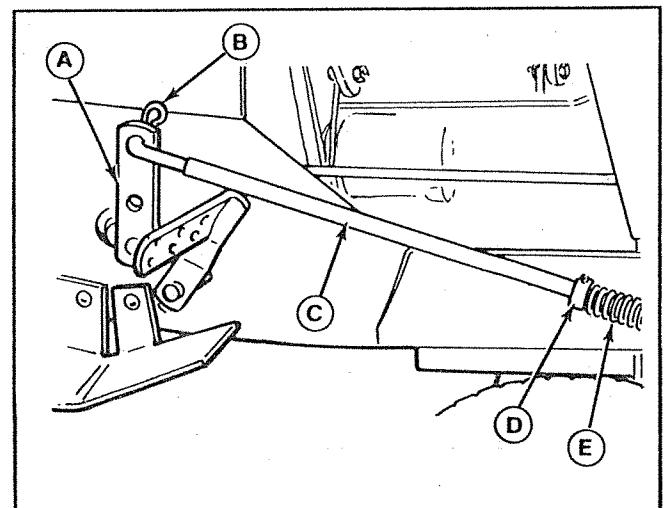

**Figure 6. Attach Lift Rod**

- |                     |                    |
|---------------------|--------------------|
| A. Tractor Lift Arm | D. Rear Set Collar |
| B. Spring Clip      | E. Spring          |
| C. Lift Rod         |                    |



4. Remove the snowthrower from the tractor by using either one of the following methods "a" and "b". (The belt may remain on snowthrower pulley unless removal is desired for storage.)
  - a. Remove the two pins and spring clips (C and D, figure 8) from snowthrower clips (E) and remove the snowthrower. Remove the two pins and spring clips (C and D) that secure snowthrower hitch then remove it from the tractor hitch.
  - b. Remove the two pins and spring clips that secure snowthrower hitch (A, figure 8) to tractor hitch (B). Remove the snowthrower and hitch by pulling up and away from tractor hitch.
5. To use tractor without snowthrower decrease front tire pressure to normal psi (see tractor Operator's Manual).

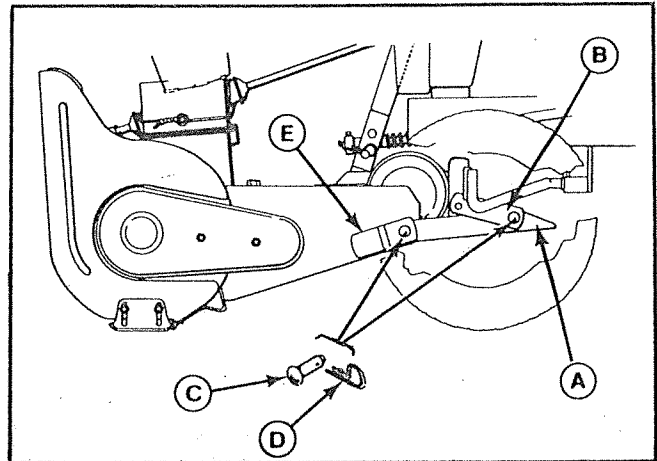


Figure 8. Attach Snowthrower

- |                      |                |
|----------------------|----------------|
| A. Snowthrower Hitch | D. Spring Clip |
| B. Tractor Hitch     | E. Clip        |
| C. Pin               |                |

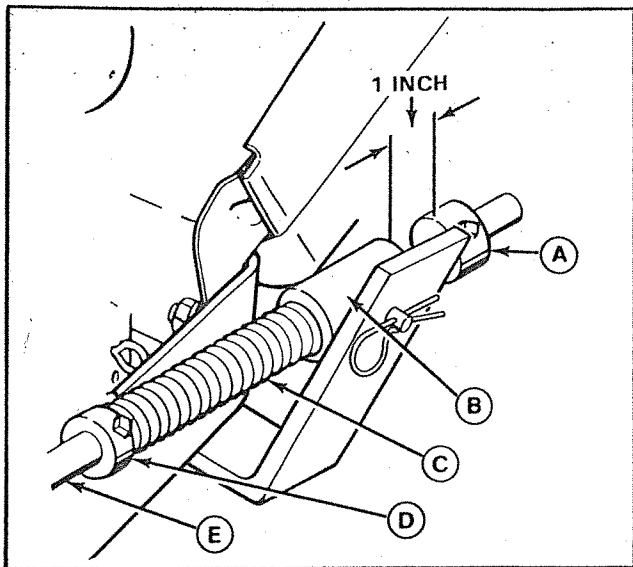


Figure 7. Lift Rod Adjustment

- |                     |                    |
|---------------------|--------------------|
| A. Front Set Collar | D. Rear Set Collar |
| B. Rod Guide        | E. Lift Rod        |
| C. Spring           |                    |

# Operation

## CONTROLS

Figure 9 shows the locations, names and functions of the snowthrower controls.

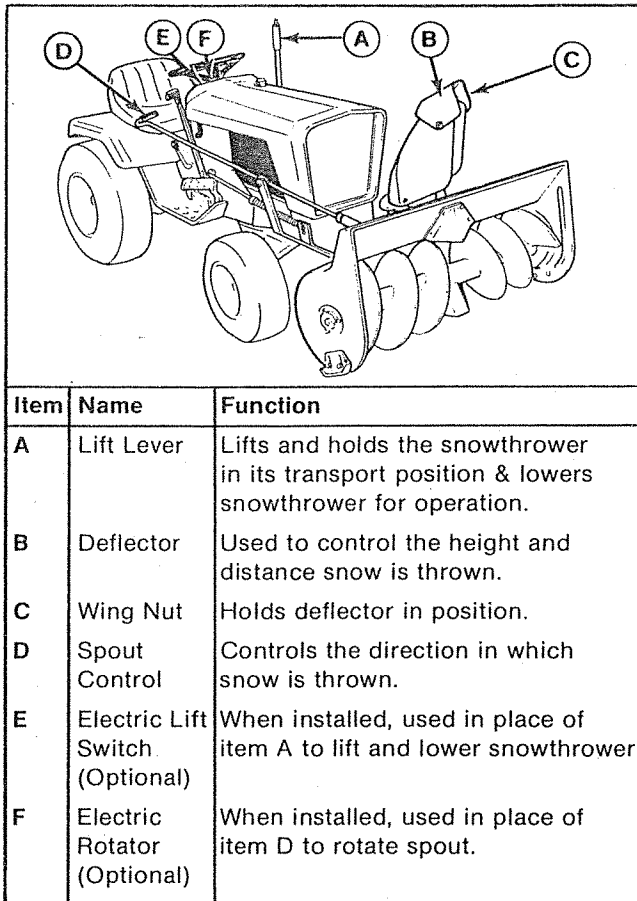


Figure 9. Controls

## CHECKS BEFORE STARTING

1. Check the tires for proper inflation pressure: 20 psi (138 kPa) is recommended for front tires when snowthrower is installed.
2. Refer to Normal Care section of this manual to determine and perform needed care. Also refer to the tractor manual Normal Care section to be sure it is prepared for winter use.
3. Clear the area of operation of all articles which might be caught in or thrown by the snowthrower.
4. Adjust the chute deflector by loosening the wing nut and moving the deflector up or down. Be sure to tighten the wing nut after positioning the deflector. Most snowthrowing can be done with the deflector all the way up and the engine at 3/4 to full speed.

5. Clear the auger of any ice particles which may damage the auger.
6. Adjust the skid shoes as outlined in the Adjustment section of this manual to suit the type of surface you will be operating on.
7. Make sure all screws, nuts and pins are present and secure.

### WARNING

#### Slope Operation

Never operate on slopes greater than 35 percent (19.3°) which is a rise of 3-1/2 feet (1067 mm) vertically in 10 feet (3.1 m) horizontally. When operating on slopes greater than 20 percent (11.3°) one wheel weight on each rear wheel and tire chains are required. Select slow ground speed before driving onto a slope. Do not use brakes to control speed. On Semi-Automatic and 6-Speed models, do not attempt to shift gears while on slopes because once out of gear, it may not be possible to shift into another gear. Drive UP and DOWN the slope, never across the face, use caution when changing directions and **DO NOT START OR STOP ON SLOPES.**

## TRANSPORTING

Disengage the PTO and then raise the snowthrower. Adjust ground speed according to road conditions.

## ENGINE SPEED & GEAR SELECTION

Set the tractor engine control for 3/4 to full speed for normal snow throwing. Full engine speed is best when throwing wet and heavy snow. Use the slower engine speeds to adjust the throwing distance during operation and when throwing light snow.

The tractor ground speed will depend upon the type and amount of snow that must be cleared. For most conditions, 1 to 2 mph (1.6 to 3.2 km/h) is a good starting speed. Refer to your tractor manual, and set the transmission gear shift or control lever accordingly. As the snow gets heavier or wetter, you will want to increase engine speed and decrease tractor speed.

## SNOW REMOVAL SUGGESTIONS

 **CAUTION**

Always raise the snowthrower before turning or backing to prevent damage to it.

Determine the best snow removal pattern before beginning. Wind direction is an important factor to consider. Rotate the spout to discharge snow downwind. Plan the pattern so that you avoid throwing snow on cleared areas and on yourself as you're operating.

When land contour permits, it is best to travel in the longest direction to minimize turning.

 **WARNING**

If the auger stalls or the chute plugs, Disengage the PTO, stop the engine and remove the key. Set the parking brake. **WAIT FOR MOVING PARTS TO STOP.** Remove the foreign object or clear the spout before restarting engine.

In very deep or heavy snow, it may be necessary to make the first pass with snowthrower partially raised, backing up every few feet to clear the snow left on the surface. Also, it may be necessary to slice off less than the full width of the auger or to reduce ground speed. If the snow stops flowing freely from the spout, use reverse to back away until snowthrower clears itself.

# Normal Care

## SCHEDULE FOR NORMAL CARE

A schedule for normal, routine care is given in the following chart.

Care Required	Schedule
Clean snow and ice from snowthrower.	After Each Use.
Lubricate snowthrower. (figure 11)	Every ten hours or at least once a year.
Inspect, adjust and lubricate drive chain.	Once a year or more often under frequent use.

### Normal Care Chart

**WARNING**

For your personal safety, disengage PTO, stop engine, remove key, set parking brake, and be sure snowthrower auger has stopped turning before attempting to maintain, service or adjust the snowthrower.

### NORMAL STORAGE

Between snow removal jobs, the tractor and snowthrower are best stored in a cool, dry area. If the unit is stored in a warm (above freezing temperature) area, it should be moved outdoors and allowed to cool before beginning work. Otherwise, the snow may melt on the warm surfaces of the snowthrower and then freeze where it can cause jams.

Before returning the unit to storage, stop the tractor and remove key from ignition. Then brush off all snow from both the snowthrower and the tractor. If possible, restart the tractor engine and allow it to idle for about 5 minutes. This will help melt and dry up snow in hidden areas of the engine. These efforts will help avoid freezeups that might otherwise hinder easy starting and operation the next time the unit is needed.

### OFF-SEASON STORAGE

To protect your snowthrower, store it in an enclosed dry area. Prepare the snowthrower for off-season storage as follows:

1. Remove snowthrower from tractor.
2. Hose or brush the main housing to remove all dirt and chipped paint.
3. Paint or lightly coat with oil any area where paint has worn or chipped away.
4. Lubricate snowthrower (figure 11).

5. Store the snowthrower in a dry place. Store the belt in a cool, dark place away from heat and sunlight.
6. To save space, the hitch can be removed for storage by removing the two pins and spring clips attaching it to the snowthrower, and by removing the belt from the snowthrower auger pulley.
7. If the tractor is to be used in warm weather, remove the winterizing deflector and carburetor shield to avoid engine overheating and damage.

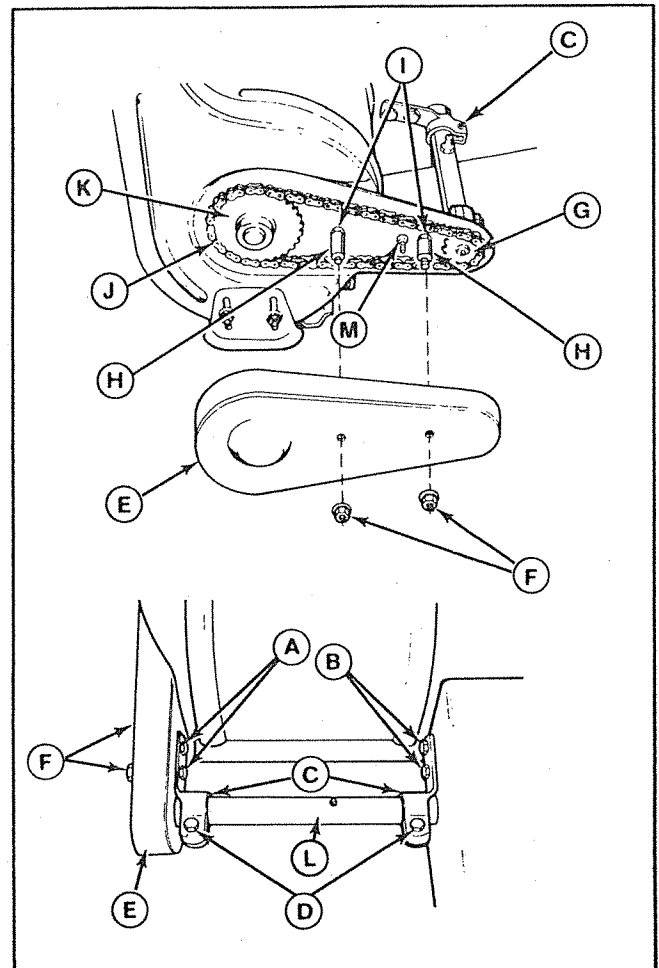


Figure 10. Drive Chain

- |                         |                        |
|-------------------------|------------------------|
| A. Screws               | H. Spacers             |
| B. Nuts                 | I. Nuts                |
| C. Clamps               | J. Chain               |
| D. Screw                | K. Auger Sprocket      |
| E. Chain Guard          | L. Drive Shaft Housing |
| F. Nuts                 | M. Flange Nut          |
| G. Drive Shaft Sprocket |                        |

**INSPECT, LUBRICATE & ADJUST  
DRIVE CHAIN**

1. Remove the chain guard (E, figure 10) by removing the two nuts (F).
2. Check the chain for wear or damage. Replace chain if worn or broken.
3. There should be no slack in the chain and the sprockets (G & K) should be aligned. The drive shaft housing (L) should be parallel with the auger housing. To adjust, proceed as follows.
  - a. Loosen the two screws (A) and two nuts (B).
  - b. Pull rearward on the drive shaft housing (L) until all slack is removed from chain. With drive shaft housing parallel to auger housing and sprockets aligned, retighten the two screws (A) and nuts (B). Be sure to hold nuts while tightening screws (A) and hold screws (inside housing) while tightening nuts (B). Torque to 40-45 ft. lbs.
  - c. Spread a coat of grease on the chain, working the grease into the links.
  - d. Reinstall the chain guard and two nuts.

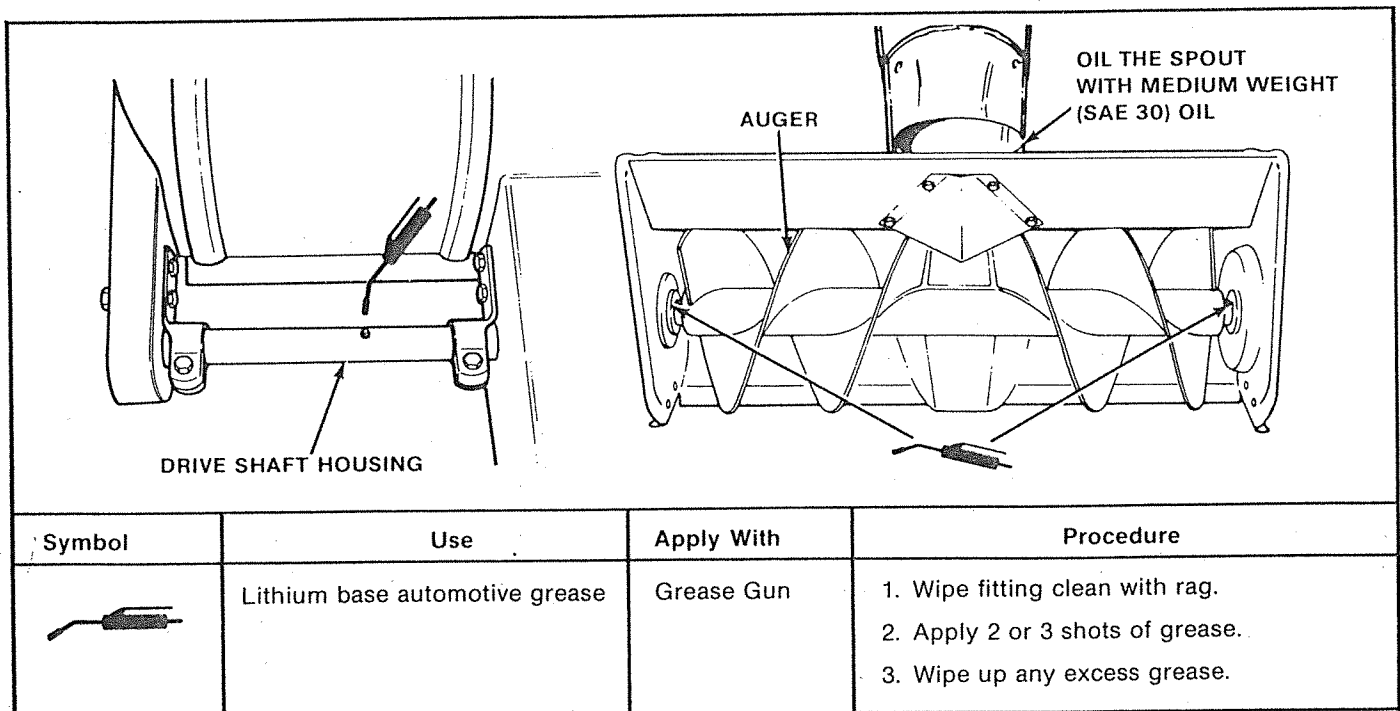


Figure 11. Lubricate Snowthrower

# Troubleshooting

**⚠ WARNING**

To avoid serious injury, perform maintenance on the tractor or snowthrower only when the engine is stopped. Always remove the ignition key before beginning maintenance to prevent accidental starting of the engine.

Troubleshooting procedures are provided in figure 12. To use these procedures, first locate the problem description that best describes the trouble that you have encountered. Check the possible causes one at a time in the order that they are listed. Correct any problems that are found and try to operate the snowthrower again to see if you have eliminated the trouble.

Problem	Cause/Remedy
1. Snowthrower auger does not rotate.	<ul style="list-style-type: none"> <li>A. PTO lever not engaged. Engage PTO lever. See Operation section.</li> <li>B. Foreign material blocking auger. STOP engine. Remove key. Unplug auger.</li> <li>C. Snowthrower drive belt slipping. Adjust drive belt tension. See Adjustments section.</li> <li>D. Drive chain broken. Replace parts as necessary.</li> </ul>
2. Auger rotates, but snow not thrown far enough.	<ul style="list-style-type: none"> <li>A. Engine RPM too slow. Operate engine at 3/4 - full throttle.</li> <li>B. Ground speed too fast. Use low gear.</li> <li>C. Snowthrower discharge spout clogged. STOP engine. Remove key. Unplug discharge spout.</li> </ul>
3. Scraper bar does not clean down to hard surface.	<ul style="list-style-type: none"> <li>A. Skid shoes not properly adjusted. Adjust skid shoes. See Adjustments section.</li> </ul>
4. Snowthrower picks up and throws stones on gravel drive.	<ul style="list-style-type: none"> <li>A. Skid shoes not properly adjusted for gravel surface. Adjust skid shoes. See Adjustments section.</li> <li>B. Too much down pressure on snowthrower. Use the tractor lift lever to raise the snowthrower slightly. See Operation section.</li> </ul>
5. Tractor does not have sufficient traction.	<ul style="list-style-type: none"> <li>A. Tractor too light at rear wheels. Use rear wheel weights and tire chains. See Accessories.</li> </ul>
6. Tractor not stable on sloping surfaces.	<ul style="list-style-type: none"> <li>A. Ground speed too fast. Reduce ground speed.</li> <li>B. Tractor not properly weighted. Use rear wheel weights and tire chains. See Accessories.</li> <li>C. Tire pressure incorrect. Inflate tires according to tractor operator's manual.</li> </ul>
7. Auger does not stop when PTO is disengaged.	<ul style="list-style-type: none"> <li>A. Snowthrower brake not properly adjusted. Adjust brake. See Adjustments section.</li> <li>B. Belt tension not properly adjusted. Adjust belt tension. See Adjustments section.</li> <li>C. Belt stops not properly adjusted. Adjust PTO pulley belt stops. See Adjustments section.</li> </ul>

Figure 12. Troubleshooting Procedures

# Adjustments

**⚠ WARNING**

To avoid serious injury, perform adjustment procedures on the tractor only when the engine is stopped. Always remove the ignition key before beginning the adjustment procedures to prevent accidental starting of the engine.

## SKID SHOE ADJUSTMENT

The skid shoes can be adjusted up or down to keep the snowthrower working efficiently on various types of surfaces.

On smooth, hard surfaces, such as concrete or asphalt, the skid shoes should be adjusted so that the scraper bar is resting on the surface.

To adjust the skid shoes up or down, loosen the two nuts holding each skid shoe and move the skid shoes to the desired position (see figure 13). Tighten the nuts securely, making sure the skid shoes are parallel to the ground surface and both adjusted to the same level.

On rough surfaces, such as gravel, the skid shoes should be adjusted down. This helps to keep the scraper bar above the ground so that it doesn't pick up stones. Use scraps of wood to raise the scraper bar about 1 inch (25 mm) above the level ground surface. Then drop the skid shoes down to the ground, keeping the bottom edge of the skid shoes level. The snowthrower will now be supported by the skid shoes.

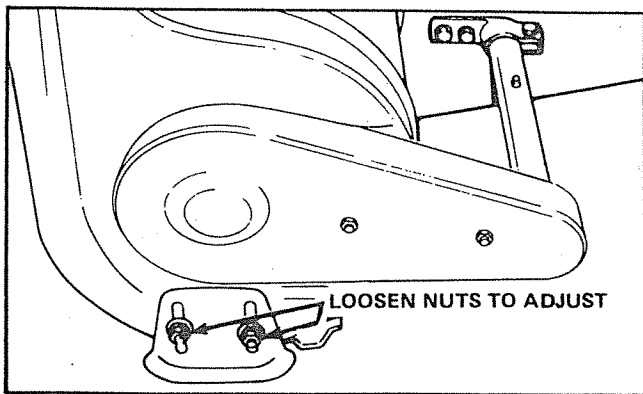


Figure 13. Skid Shoe Adjustment

## DRIVE BELT TENSION

1. Pull the belt tensioning lever back and up to engaged position to tighten the belt.

2. Locate the decal on the front idler pulley bracket shown in figure 14. Notice it has a front red zone, a green zone and a rear red zone. The rear edge of the front idler bracket should be in the front edge of the front red area as in figure 14. If not, go on to step 3.

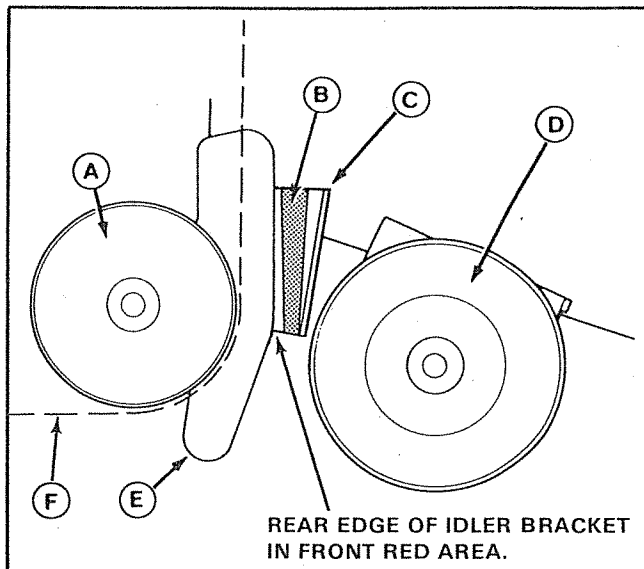


Figure 14. Adjustment

- |                |                        |
|----------------|------------------------|
| A. Front Idler | D. Rear Idler          |
| B. Green Zone  | E. Front Idler Bracket |
| C. Stop        | F. Belt                |

3. Push the belt tensioning lever down to release belt tension.
4. Loosen the fasteners which secure the rear idler in the slot. To move idler bracket forward, move the rear idler pulley toward the rear. To move idler bracket rearward, move the rear idler pulley toward the front. Tighten the fasteners.
5. Pull the belt tensioning lever up to engaged position to tighten the belt.
6. The rear edge of the idler bracket should be in the front edge of the front red area as in figure 14. If not, repeat the adjustment procedure.

**⚠ CAUTION**

In no instance should the belt, where it passes behind the front idler pulley, come in contact with the rear idler pulley. Allow sufficient clearance.

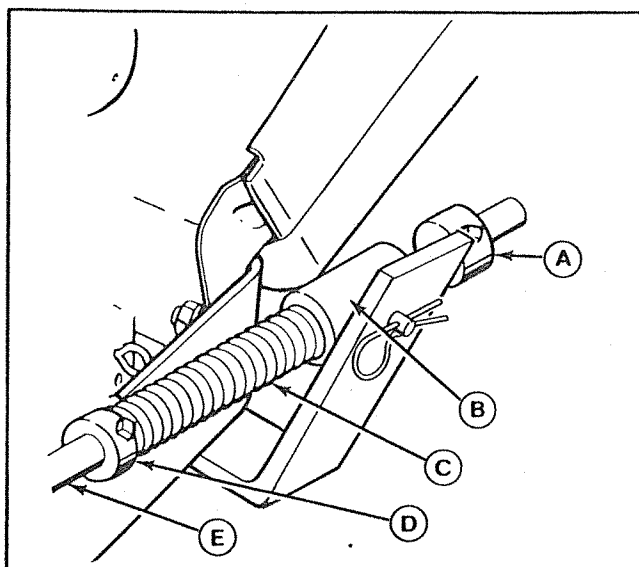


Figure 15. Lift Rod Adjustment

- |                     |                    |
|---------------------|--------------------|
| A. Front Set Collar | D. Rear Set Collar |
| B. Rod Guide        | E. Lift Rod        |
| C. Spring           |                    |

#### LIFT ROD ADJUSTMENT

##### WARNING

On tractors with hydraulic lift levers it will be necessary to start the engine to raise or lower the lift lever. Always seat yourself in Operator's position before starting engine. Always shut off engine and remove key before leaving seat. Make sure parking brake is set and moving parts have stopped.

1. Fully raise the snowthrower. Measure the clearance between the scraper bar and the ground. The clearance should be about 3-1/2 to 4 inches (89 to 102 mm). If not, perform step 2. If clearance is OK, go to step 3.

2. Lower the snowthrower. Loosen the setscrew in the front set collar (A, figure 15). To increase clearance, move the set collar toward the rod guide (B). To decrease clearance, move the set collar away from rod guide (toward front). Tighten the setscrew. Raise the snowthrower and recheck the measurement. Readjust if necessary.
3. The scraper blade will float over the surface bumps of dig into them depending on the down pressure. The initial adjustment made during snowthrower installation may be suitable. If not, fully raise the snowthrower. Loosen the setscrew in the rear set collar (D). To allow scraper blade to float more, move the rear set collar toward the rear. To increase down pressure move the rear set collar toward the spring (C). Tighten the setscrew. Lower the lift lever.

##### WARNING

On tractors with hydraulic lift levers, keep hands and feet from under snowthrower when snowthrower is in raised position. Snowthrower may lower when engine is off.



# Assembly

## ATTENTION SETUP PERSONNEL:

As setup personnel you have an obligation to know the product better than the customer. This includes safety related items. Prior to actual setup, thoroughly familiarize yourself with the Operator's Manual. Pay special attention to all safety warnings. It is possible during setup to place yourself in a position which is more hazardous than when the unit is in operation. Remember, it is your responsibility to set up the product safely and to know it well enough to be able to instruct a customer in the safe use of his power unit.

Safety is a matter of common sense . . . A matter of thinking before acting. Most shops have specific safety practices. Follow them. The precautions listed in the Operator's Manual should not supersede existing practices but should be considered as supplemental information.

## CONTENT OF SECTION

The snowthrower is shipped only partially assembled for packaging reasons. This section provides the necessary instructions for assembling the snowthrower.

## ASSEMBLY

Remove all loose parts, the skin pack, and the snowthrower from the shipping carton. Open the skin pack and hardware bags and arrange all parts according to size and type. Then proceed as follows:

### NOTE

Refer to chart inside back cover to identify screws, nuts and washers.

1. Install support bracket (C, figure 16) as shown with nuts  $3/8 \times 1$  inch (9.5 x 25.4 mm) capscrews and flange locknuts (A & B).

### NOTE

Do not let pivot bearing alone support the full weight of control rod, as the bearing can be damaged.

2. Insert end of spout control rod (E, figure 16) through plastic pivot bearing (D) on auger housing. Install a  $3/32 \times 5/8$  inch (2.4 x 16 mm) cotter pin in the lower rod hole on the inside of the housing, and spread cotter pin legs fully around rod. Pull the rod back so cotter pin is up against pivot bearing and install another cotter pin through the rod just above the bearing. Spread cotter pin legs fully around the rod.
3. Place the thin plastic liner (G, figure 16) inside the rod guide (H).
4. Install rod guide and liner over spout control rod as shown. Attach rod guide to support bracket

with a  $5/16 \times 1-1/8$  inch (10 x 28.5 mm) capscrew and a locknut (F & I, figure 16). Tighten locknut (usually flush with end of capscrew) so control rod is held firmly but is still free enough to turn inside of rod guide.

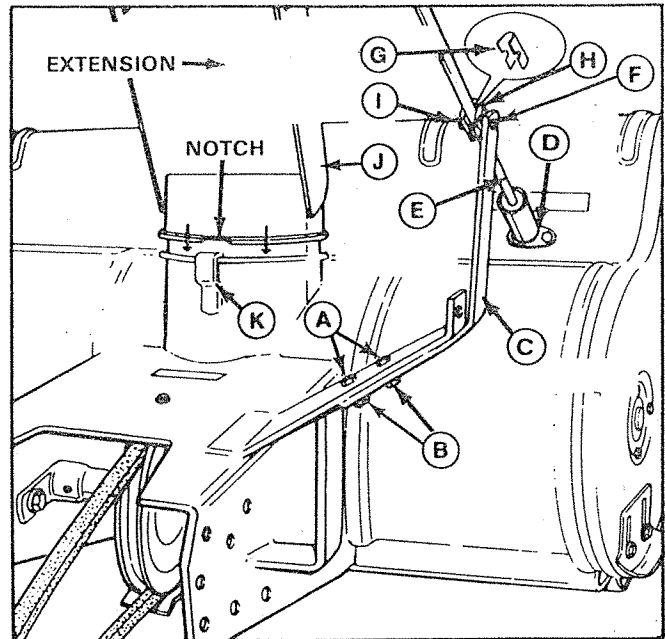


Figure 16. Installing Spout Control

- |                    |                    |
|--------------------|--------------------|
| A. Capscrews       | G. Plastic Liner   |
| B. Flange Locknuts | H. Rod Guide       |
| C. Support Bracket | I. Locknut         |
| D. Pivot Bearing   | J. Spout Extension |
| E. Control Rod     | K. Clip            |
| F. Capscrew        |                    |

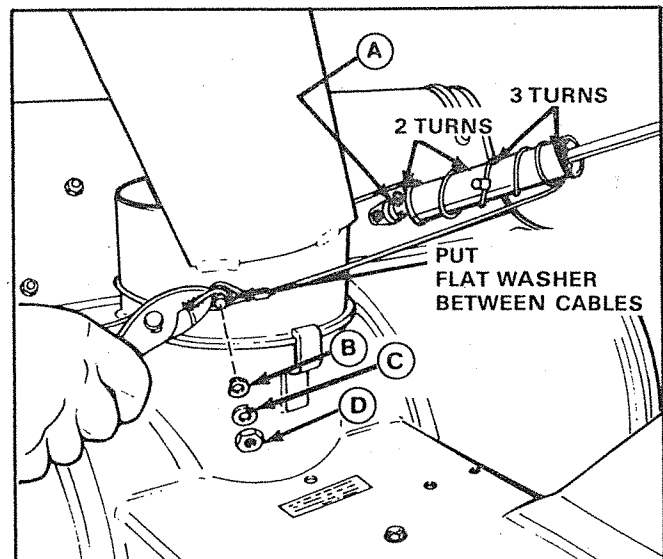


Figure 17. Installing Control Cable

- |               |               |
|---------------|---------------|
| A. Cotter Pin | C. Lockwasher |
| B. Cup Washer | D. Nut        |

5. Install the spout extension (J, figure 16) on the housing opening so the clip (K) on the housing is positioned in the notch on the spout extension. Then rotate spout extension slightly to start its rim under the clip. Oil mating surfaces so spout extension rotates freely.
6. With the spout extension facing slightly left, wind the cable around the control rod spool as shown in figure 17. Wind three turns on the rear part of the spool so that the cable leaves the spool on the lower edge as shown. Wind two turns on the front part of the spool so that the cable leaves the spool on the upper edge as shown. If necessary, loosen the cable clamp and then retighten after winding the cable.
7. Place the looped end of the cable over the stud on the spout extension (see figure 17). Place the small flat washer provided on the stud. Pull the other end of the cable around the stud as shown with a pliers. While holding the cable tight, install the cup washer (facing inward), lockwasher and nut to hold the cable. Tape any loose cable neatly to the taut cable.
8. Attach the deflector (J, figure 18) to the spout extension with two screws (H), washers (G), spacers (F), washers (A), lockwashers (E) and nuts (D).
9. Install the two clips (I, figure 20) as shown with four capscrews (P) and flange locknuts (J).
10. Install the two spacers (M) as shown with two capscrews (L), lockwashers (N) and nuts (O).
11. Slip the belt onto the pulley inside the snowthrower. The "V" side of belt rides in the pulley.
12. Insert the belt stop (A, figure 19) thru hole in snowthrower and position as shown. The belt stop leg (inside snowthrower) should be positioned over top of belt on snowthrower pulley. Install the belt stop with capscrew (T, figure 20), washer (S), lockwasher (Z) and nut (AA).
13. Slip the belt between the belt stop (AB, figure 20) and pulley (C) loosening the belt stop as necessary. The flat side of belt rides against the pulley. Tighten the belt stop.
14. Connect the lift rod to the snowthrower by inserting the mounting tip of the rod guide (W, figure 20) in the support bracket hole. Insert the spring clip (Q) to secure in place.

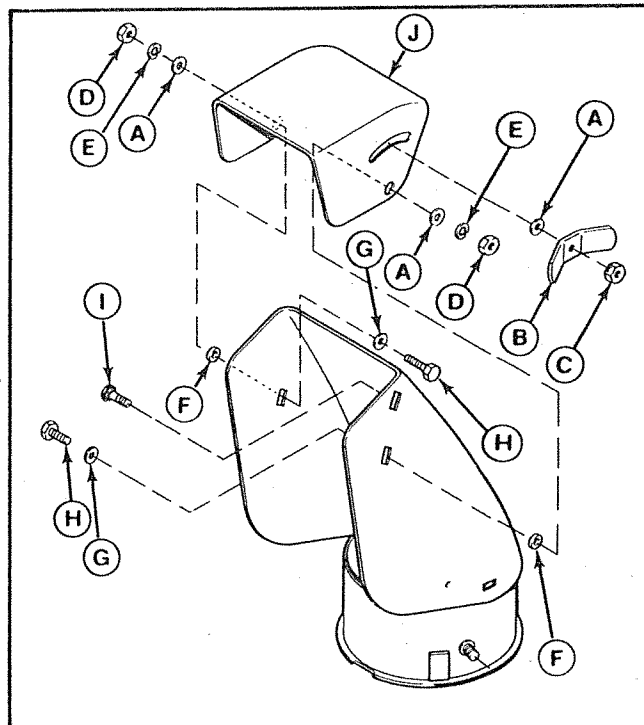


Figure 18. Installing Deflector

- |                     |                        |
|---------------------|------------------------|
| A. Washer, 5/16     | F. Spacer              |
| B. Wing Nut         | G. Washer, 5/16        |
| C. Locknut, 5/16    | H. Screw, 5/16         |
| D. Nut, 5/16        | I. Carriage Bolt, 5/16 |
| E. Lockwasher, 5/16 | J. Deflector           |

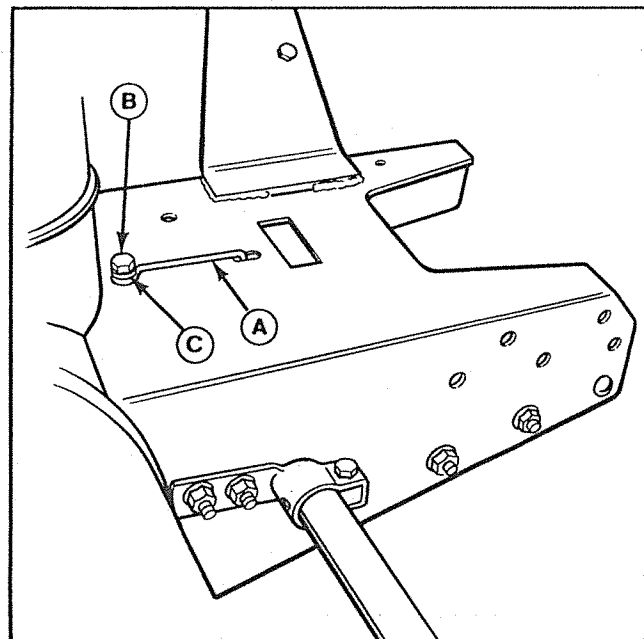


Figure 19. Snowthrower Pulley Belt Stop

- |                 |
|-----------------|
| A. Belt Stop    |
| B. Capscrew     |
| C. Plain Washer |


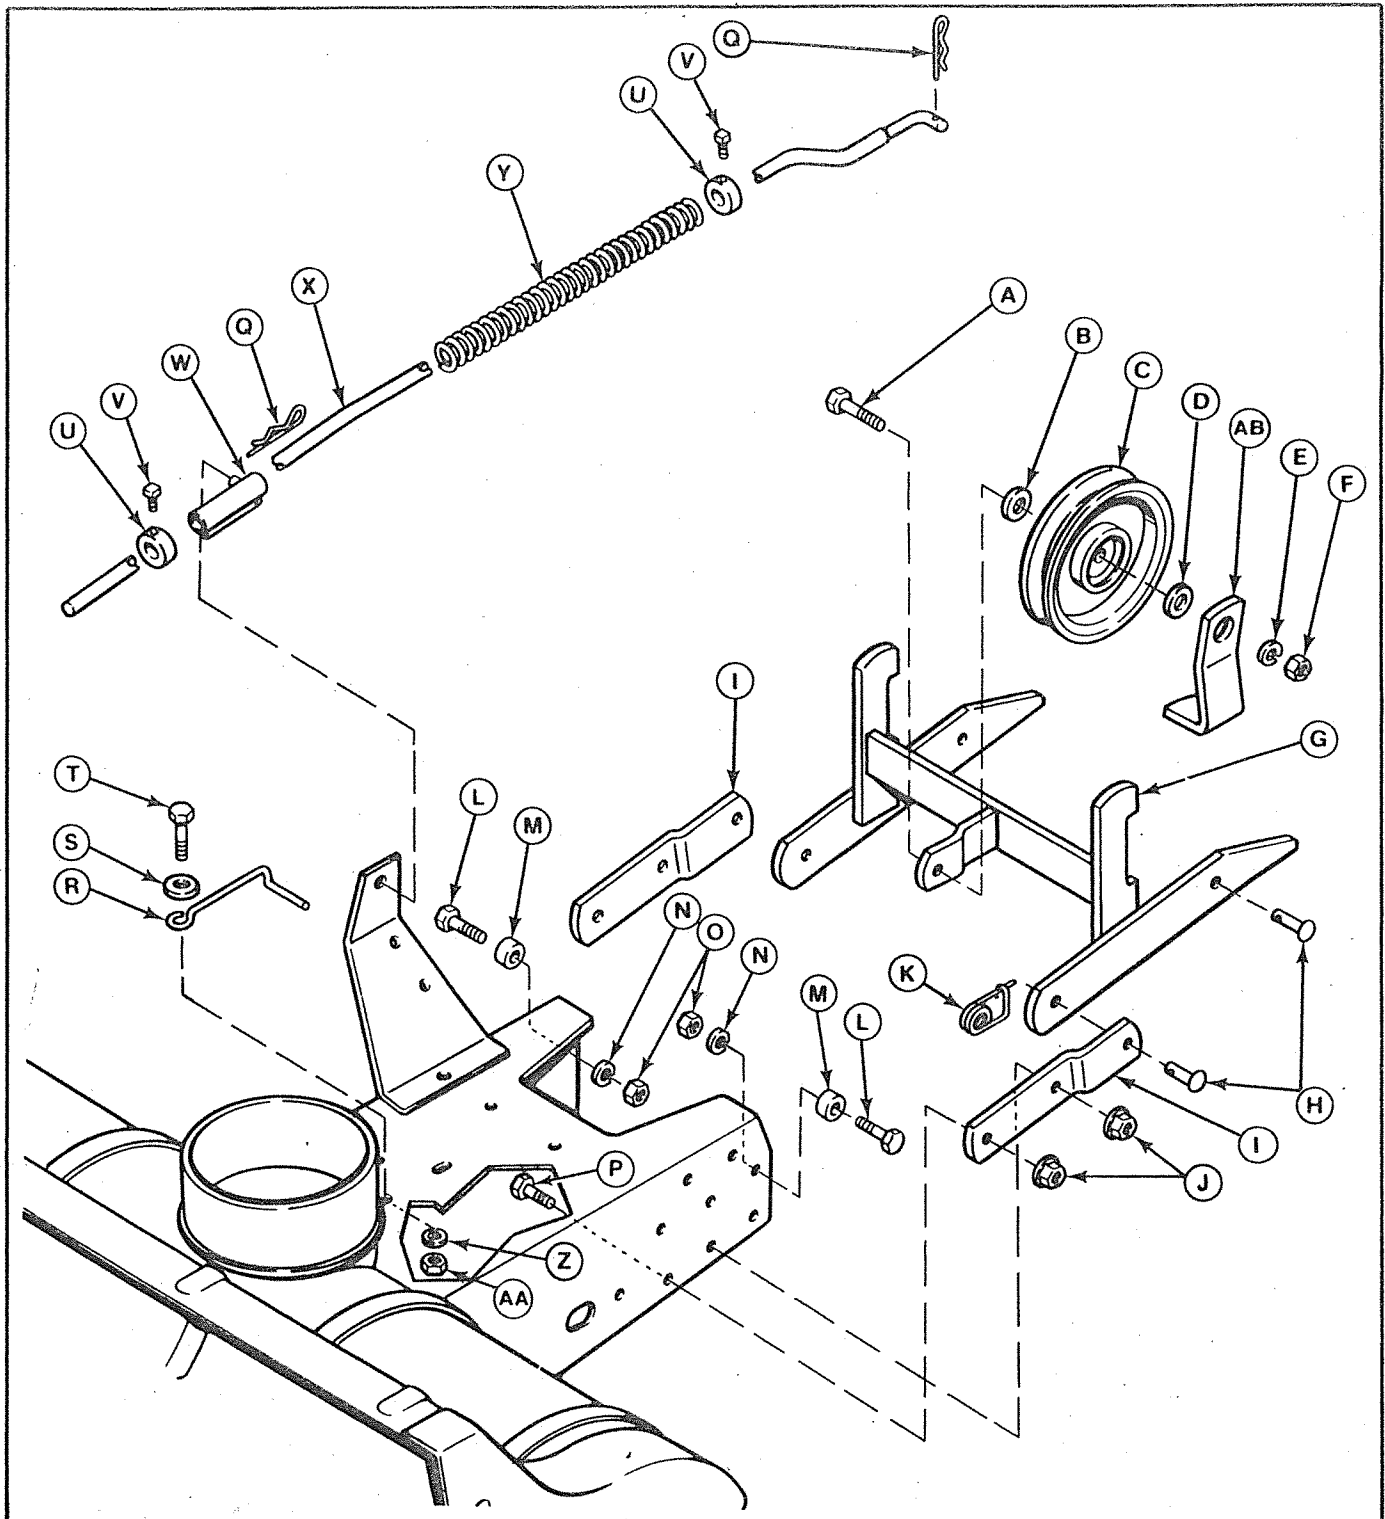


Figure 20. Snowthrower Hitch & Lift Rod Assembly, Exploded View

- |                          |                          |                         |                     |
|--------------------------|--------------------------|-------------------------|---------------------|
| A. Capscrew, 3/8 x 1-1/2 | H. Pin                   | O. Nut, 3/8             | V. Setscrew         |
| B. Washer, 5/16          | I. Frame Clip            | P. Capscrew 7/16        | W. Rod Guide        |
| C. Flat Idler Pulley     | J. Flange Locknut, 7/16  | Q. Spring Clip          | X. Lift Rod         |
| D. Washer, 5/16          | K. Spring Clip           | R. Belt Stop            | Y. Spring           |
| E. Lockwasher, 3/8       | L. Capscrew, 3/8 x 1-1/4 | S. Washer, 1/4          | Z. Lockwasher, 5/16 |
| F. Nut, 3/8              | M. Spacer                | T. Capscrew, 5/16 x 3/4 | AA. Nut, 5/16       |
| G. Snowthrower Hitch     | N. Lockwasher, 3/8       | U. Set Collar           | AB. Belt Stop       |

**WINTERIZING THE TRACTOR  
(Briggs & Stratton Engines)**

The parts required to winterize the Briggs & Stratton engine are shown in figure 21. Install the parts as described in the following paragraphs.

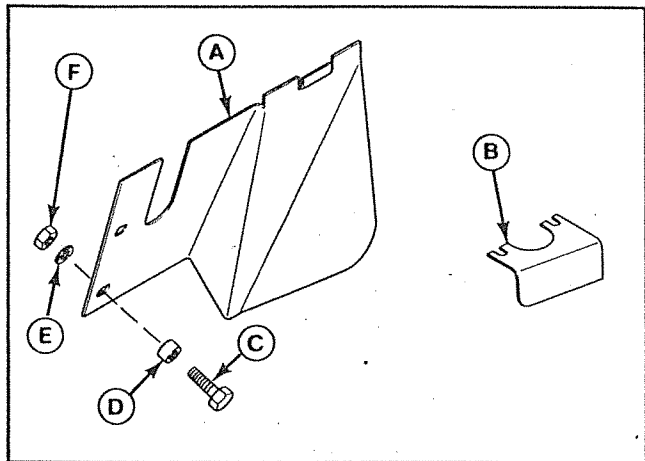

**Figure 21. Winterizing Parts**

- A. Deflector (Qty. 1)
- \*B. Carburetor Shield (Qty. 1)
- C. Capscrew, 1/4 x 1 (Qty. 2)
- D. Spacer
- E. Lockwasher, 1/4
- F. Nut, 1/4


\*Required only for tractors with Mfg. No. 1690433 and lower.

**Mounting Deflector on Early Model Tractors  
(Mfg. No. 1690433 and lower)**

There are three possible variations in mounting the deflector. Install the deflector as described in either step 1, 2 or 3.

1. If the tractor has side mounted headlights, use hardware that secures the left headlight to the hood. The hardware sent with kit is not needed. The deflector will be positioned as shown in figure 22 (headlight not shown).
2. If the tractor does not have side mounted headlight, but has mounting holes, install the deflector as shown in figure 22. Use the two capscrews, lockwashers and nuts from kit. Install capscrews from outside. The two spacers sent with kit are not needed.
3. If the tractor has neither side mounted headlights or mounting holes, two 5/16 inch holes must be drilled. To drill the holes and install the deflector, proceed as follows.
  - a. Open the hood. Place the deflector in position as shown in figure 22. Make sure clip on top edge of deflector fully engages the hood. Slide deflector as far as possible toward front of tractor. Mark position of mounting holes and remove the deflector.

- b. Drill 5/16" holes where marked.
- c. Mount deflector using the two capscrews, lockwashers and nuts. Install capscrews from outside, with lockwashers and nuts inside against the deflector.

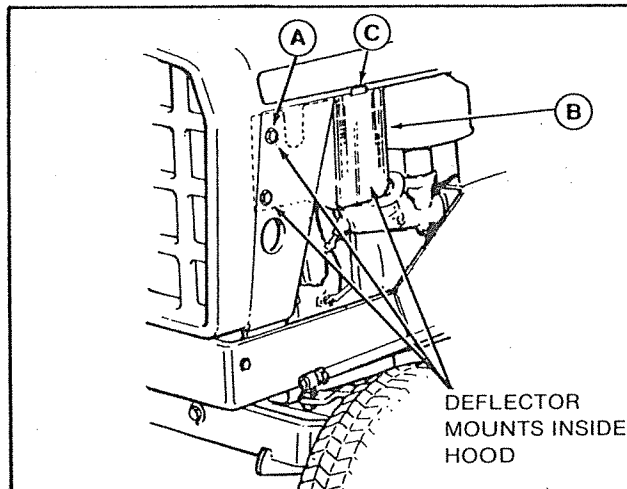


**Figure 22. Deflector Installed, Early Model Tractor**

- A. Capscrew, Lockwasher & Nut
- B. Deflector
- C. Clip

**Mounting Deflector On Later Model Tractors**

1. Position the template on the left side of the hood as shown in figure 23. Mark the positions of the two new holes with a punch and remove the template. Drill two 5/16" holes.

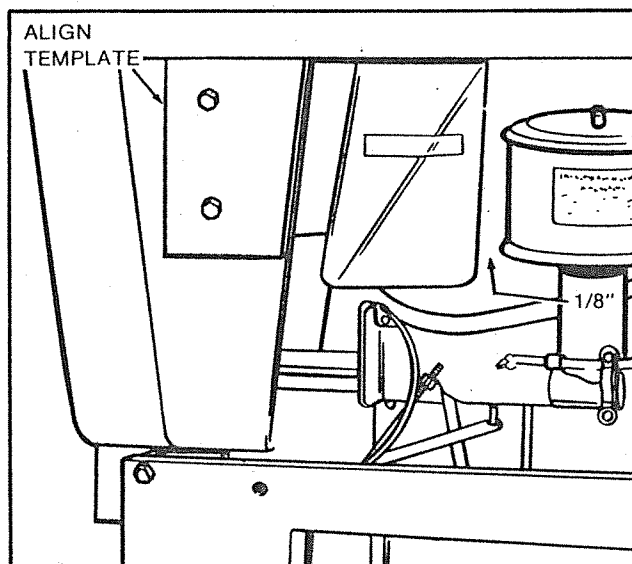

**Figure 23. Aligning Template (Later Model Tractor)  
(Shown with Deflector Installed)**

2. Install the deflector as shown in figure 24. Install the capscrews from the outside. The two spacers are between hood and deflector. Notice that the clip on top of the deflector does not engage the hood. Close the hood. There should be about 1/8" clearance between edge of deflector and air cleaner as shown in figure 23.

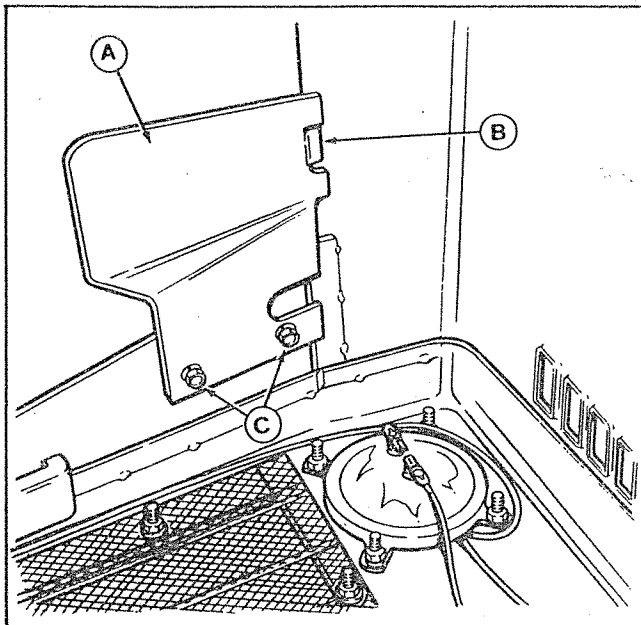


Figure 24. Deflector Installed (Later Model Tractor)

- A. Deflector
- B. Clip
- C. Lockwasher & Nut

#### Installing Carburetor Shield On Early Model Tractors

The carburetor shield is shown in figure 25.

1. Remove the air cleaner.
2. Loosen the two screws shown in figure 26 which mount the carburetor to the intake manifold.

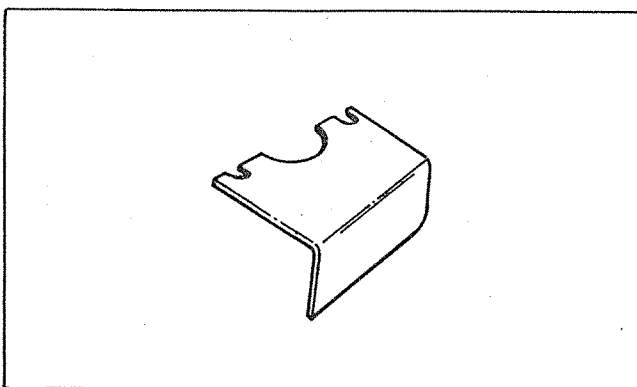


Figure 25. Carburetor Shield (Early Models Only)

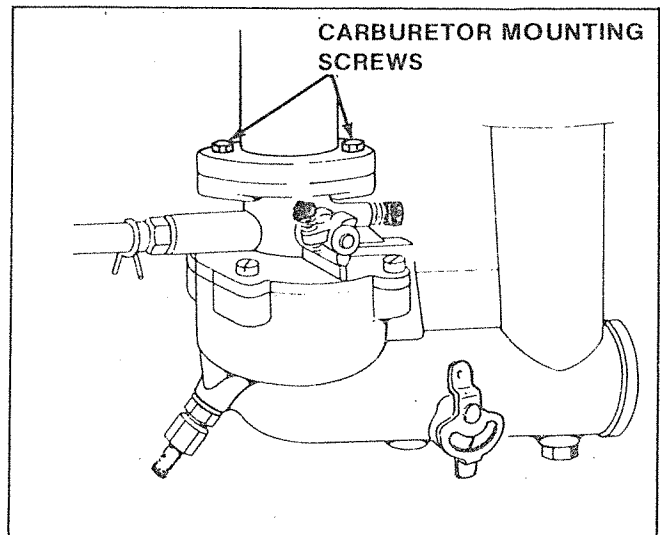



Figure 26. Shield Mounting Screws (Early Models Only)

3. Slide the carburetor shield in place, above the manifold flange, with the slots underneath the screw heads and lockwashers.
4. Tighten the two mounting screws to hold both carburetor and shield to manifold.



#### CAUTION


This kit is for winter use only. Remove for summer operation.

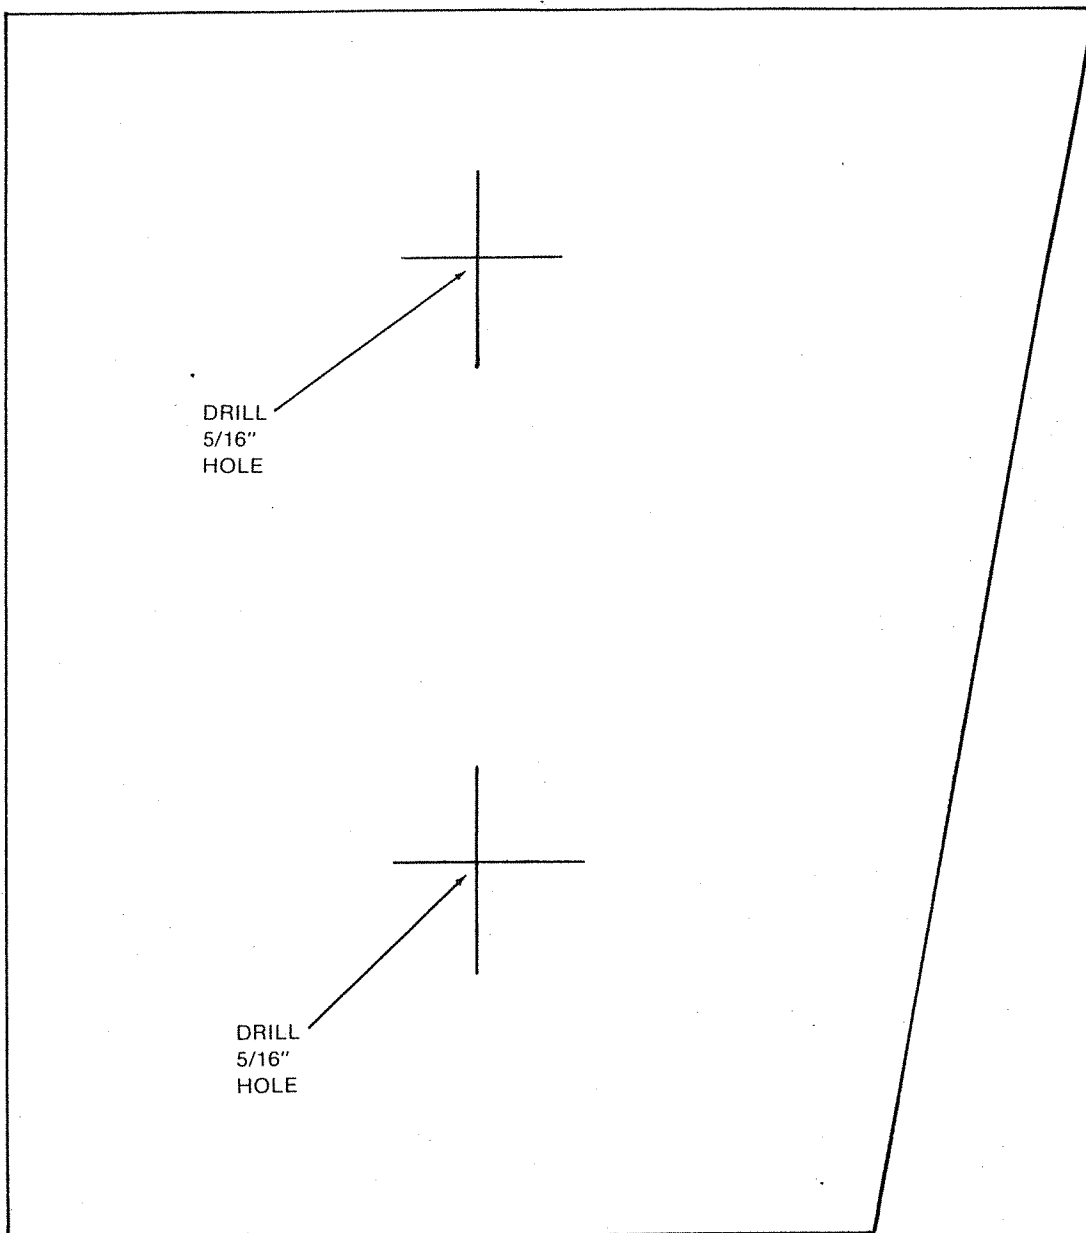

**TEMPLATE FOR INSTALLING DEFLECTOR**



# STANDARD FASTENER IDENTIFICATION CHART

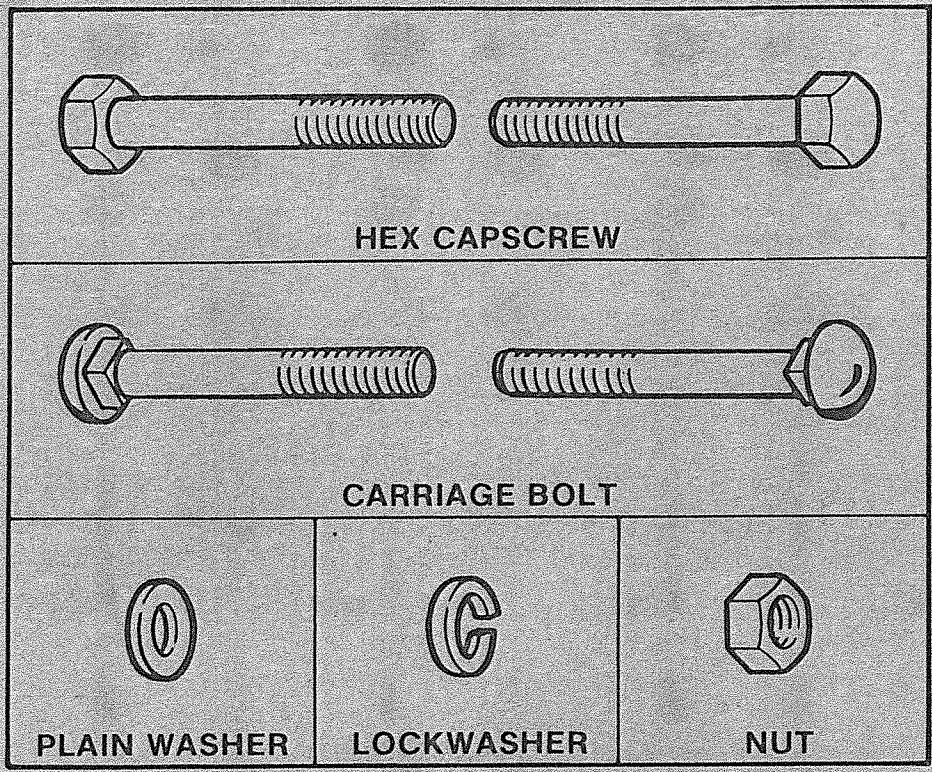


Hardware sizes are given in the illustrations throughout this manual.

If a washer or nut is identified as "washer, 1/2" or "nut, 1/2", this means the inside diameter is 1/2 inch.


If a screw is identified as "screw, 1/2 x 2", this means the shaft diameter is 1/2 inch and the shaft of the screw is 2 inches long. If a screw is identified as "screw, 1/2-16 x 2", the number "16" means that the screw has 16 threads per inch.

## HEX CAPSCREW IDENTIFICATION



Shown below are actual size hex heads for standard screw sizes. Example: a 1/4" screw has a 7/16" head and thus requires a 7/16" wrench. To measure length, use the scale below.

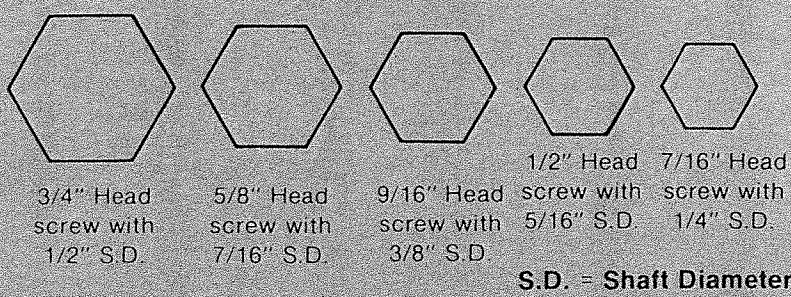

## SAMPLE: SCREW IDENTIFICATION

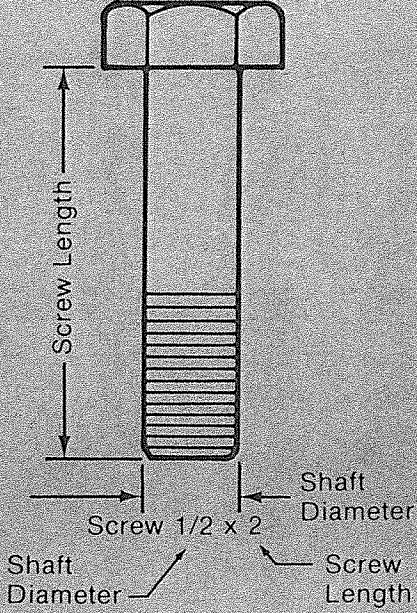

## SAMPLE: NUT IDENTIFICATION

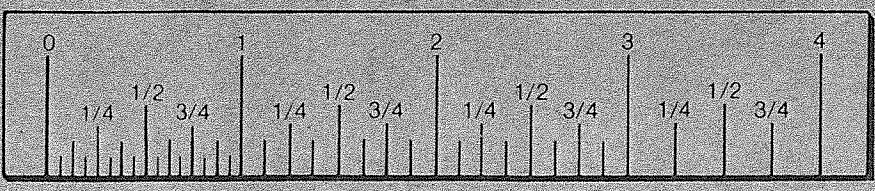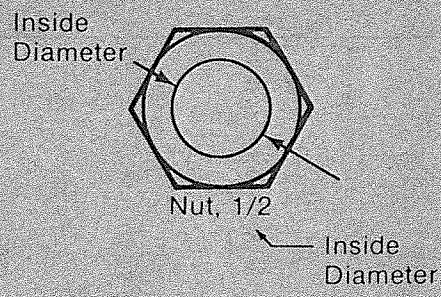

## WASHER AND NUT IDENTIFICATION

Place the washer or nut on the above scale to determine the inside diameter. The actual inside diameter can vary 1/16 inch. Use the scale for comparison.